

## BPI® Digital Hot Air Frame Warmer™

For use only by qualified personnel in a laboratory environment.

Due to high operating temperature, access should be restricted.



## BPI® Digital Hot Air Frame Warmer™

### Specifications

The BPI Digital Hot Air Frame Warmer™ (BPI#15905) is a stand-alone unit designed for the counter-top. The system uses 115 volt, 50/60 hz and is fuse protected by a 10 amp, 250 volt fuse. For use only by qualified personnel in a laboratory environment. Due to high operating temperature, access should be restricted.

HEIGHT	WIDTH	LENGTH	VOLTAGE	WEIGHT	FUSE	AMPERAGE
6.5 in.	6 in.	12 in.	110v or 220v.	8 lbs.	10 amps. 250 volts	10 amps.
16.5 cm	15.24 cm	30.5 cm		3.6 kg		
THE SET-UP KIT INCLUDES THE FOLLOWING PRODUCTS:						
• Instruction manual						

### Note

Be sure to use the ground prong on the power cord for safe operation of the instrument; never bypass it.

### Unpacking

When unpacking your dye system, please check to ensure that no concealed damage occurred in transit. If such is noted, save the shipping carton and immediately notify the shipping company's damage control inspector in your area so a claim may be processed. Failure to do this may void any future claim and replacement. Also, call BPI Customer Service so arrangements for a replacement may be made.

### Setting Up

Place your BPI Frame Warmer II™ on a LEVEL work surface convenient to an electrical receptacle. Make certain the switches are OFF. Check to be sure that the fuse is in the fuse-holder located at the rear of the machine by the power cord.

### Heating Up The System

The BPI Frame Warmer II™ has a main ON/OFF switch for the whole instrument, plus a second switch that turns the heaters on and off. The temperature of the unit can be adjusted with the up and down arrows near the display when the controller is in "set" mode

For normal operation of the unit, turn on the main switch. This will turn on the fan and cool air will start

circulating. To heat up the system, turn the heater switch on and adjust the temperature control to the desired setting. Press "set" briefly and the present set operating temperature will be displayed. Quickly press the up or down arrow button to raise or lower this set temperature, For most frames, BPI recommends a setting of 130° F. Waiting for a few seconds will cause the display to return to display of the present temperature. The unit will reach the desired temperature in a few minutes. We therefore recommend that you turn the unit off when you are not using it.

### Caution

Do not touch the top of the instrument as this gets extremely warm. Also, turn off the unit when not in use.

### Questions? Ordering....

If you have any questions about the use of your Frame Warmer II or any other BPI product, or would like to order supplies, or to receive technical support, please call your local BPI office.